

# XTN Series Programming Steps

## **Program Mode:**

1. Hold Push-to-talk (PTT) & “mon” buttons down while turning on the radio until you hear a beep. PROG should be on screen.
2. To exit program mode push PTT button at any time

## **Frequency:**

1. Push menu button
2. Push “+” or “-” buttons to choose frequency
3. Push PTT to exit or continue to program code

## **Code:**

1. Push menu button once
2. Push “+” or “-” buttons to choose code
3. Push PTT to exit or continue with scramble steps

## **Scramble:**

1. Push menu button once
2. Push “+” or “-” buttons to choose scramble setting (0, 1, 2 or 3) \*Set to 0 if matching up with other radios
3. Push PTT to exit or continue with band width

## **Band Width:**

1. Push menu button once
2. Push “+” to change to high or low (hi or lo)  
\* Set to hi for M-Series and lo for Spirit GT
3. Push PTT to exit or continue with channels

## **Channels: (6 channel model only)**

1. Push menu button once
2. Push “+” or “-” to set desired number of channel the radio will operate on.
3. Push PTT to exit or continue with call tones

## **Call Tones:**

1. Push menu button once
2. Push “+” or “-” to choose type of call tone (0 - off, 1, 2 or 3)
3. Push PTT to exit or continue with microphone sensitivity level

## **Microphone Sensitivity:**

1. Push menu button once
2. Push “+” or “-” to set sensitivity level  
3 - normal voice - quiet background  
2 - voice a bit louder - background louder  
1 - loud voice - noisy background
3. Push PTT to exit or continue with scan

## **Scan: (6 channel model only)**

1. Push menu button once
2. Push “+” or “-” buttons to choose channel
3. Push “mon” button to change between yes or no
4. Push PTT to exit or menu once to choose next channel to program

## **2600 Model Only**

### **Preset Buttons:**

1. Enter program mode
2. Push “+” or “-” buttons to choose channel to preset
3. Hold down “•” or “••” until you hear a beep
4. Push PTT to exit

### **IVox:**

1. Hold PTT and turn radio on to activate
2. To change sensitivity, push the menu button once
3. Push “+” to choose the sensitivity level  
3 - normal voice - quiet background  
2 - voice a bit louder - background louder  
1 - loud voice - noisy background
4. Push PTT to exit

---

### **Keypad Lock:**

1. Hold the menu button down until you hear a beep
2. To turn keypad lock off, hold the menu button again until you hear a beep

### **Roger Beeps:**

1. Push down “+” button while turning the radio on
2. To disable, repeat #1 again
3. May use radio without having to turn off

### **Cloning: (must have a multi-unit charger)**

1. Set master radio in program mode
2. Place master radio in front slot of multi-unit charger
3. Turn clone radio on
4. Place clone radio behind master in multi-unit charger
5. Push “mon” button on master radio, you should see a P for Pass or F for Fail after a few seconds on the master radio
6. If F shows, then try steps 1 - 5 again
7. If P shows, then remove both radios, turn them off and then on to use

---

## **NOTES:**

### **r10 or r 11:**

Hold PTT and “+” buttons while turning the radio on—radio will display r10 or r11 - if r11 follow these programming steps, if r10 please call for assistance—\*program mode, frequency and code are the same for either display

### **Factory Default:**

Push PTT and “menu” buttons at the same time while turning the radio on

### **For Help:**

Contact ProMarketing sales force at 800-215-5160 and we will talk you through it.